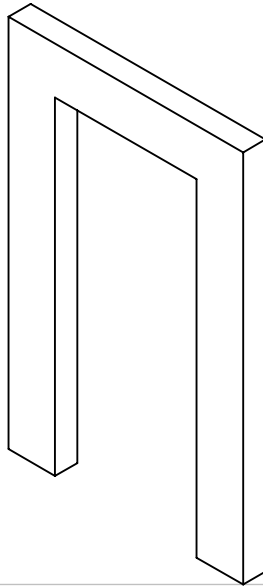
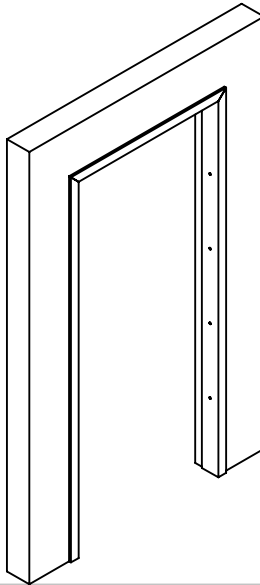
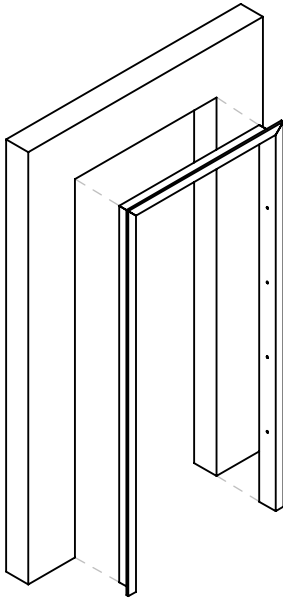
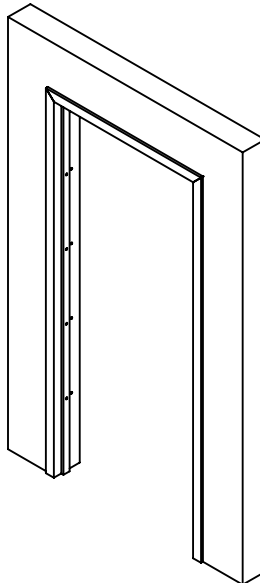
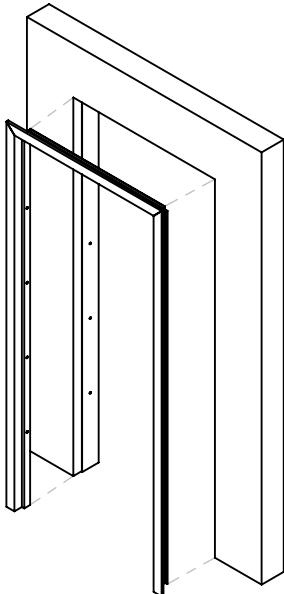


**REMODELING FRAME
INSTALLATION****1**

**VERIFY PROPER ROUGH
OPENING. OPENING SHOULD BE
NOMINAL DOOR SIZE PLUS
1 1/2" TO PLUMB AND SHIM.**

**2**

**INSERT TRIM SECTION
INTO OPENING. ADJUST
FOR PLUMB AND SHIM AS
REQUIRED. FASTEN WITH
APPROPRIATE SCREWS.**

**3**

**INSERT HARDWARE
SECTION FROM OPPOSITE
SIDE OF THE TRIM SECTION.
PLUMB AND FASTEN
THROUGH STOP WITH
APPROPRIATE SCREWS.**



MESKER™
The newest innovations in hollow metal from the
oldest hollow metal door company in America